## <u>Instruction / Installation Sheet</u> DataComm Electronics Smurf Cap Part # 100-0125




Sales Orders@datacommelectronics.com Support Info@datacommelectronics.com Office 770.448.0540


## Parts Included Smurf Cap (1) Screw Driver (1)

## STEP 1 STEP 2 Locate the end of the smurf tube and feed the pull Feed the pull string through the smurf cap op

string out of the smurf tube.

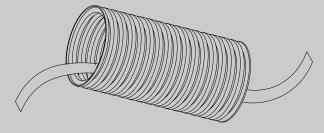


Feed the pull string through the smurf cap opening, and push smurf cap onto smurf tube. Feed the pull string through slot on the outside of cap.

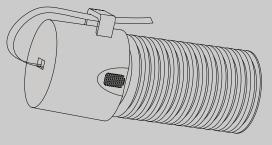

## STEP 3 STEP 4

Tie the string around the slot on the outside of the cap.

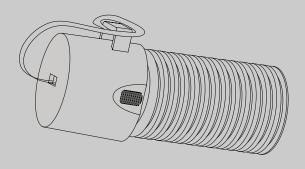

Secure the Smurf Cap into place by driving a screw through the hole at the bottom of the Smurf cap.

