


Instruction / Installation Sheet

DataComm Electronics 2-Gang 110 Phone Plate 70-0080

Installation

- Locate the central point where all telephone home runs meet.
- Install either a 2-gang mounting bracket or a 2-gang switch box at the central point where the telephone wires come together.
- Install the cable from the telephone company demarcation point to the top 110 IDC on the plate.
- Install the remaining twisted pair cables from each location in the house to the remaining 110 IDC connectors. Match the color-coding of the wires to the colors on the 110 IDC connectors. Incoming service can be tested using the Telco port.
- The wires should be punched down, using an industry standard punch-down tool, to the 110 IDC connectors following the T568A wiring configuration as shown below.
- Secure the plate to either the mounting bracket or switch box.
- Line 1 is Blue, Line 2 is Orange, Line 3 is Green and Line 4 is Brown.

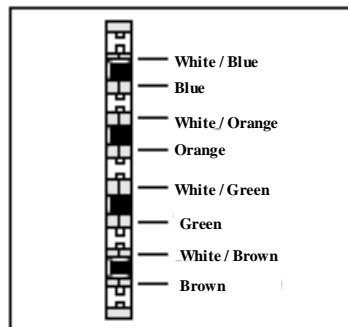

CAUTION

- Never install telephone wiring during lightning storms.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch un-insulated wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

IMPORTANT INSTRUCTIONS

- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Do not use this product near water, for example a near bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- SAVE THESE INSTRUCTIONS.

ONLY LICENSED PROFESSIONALS SHOULD INSTALL THIS PRODUCT



ETL LISTED
CONFORMS TO
UL STD 1863
ANSI/UL STD 60950-1
CERTIFIED TO
CAN/CSA STD C22.2 NO 60950-1