

Instruction / Installation Sheet

DataComm Electronics 50-3323-WH-KIT Flat Panel TV Cable Organizer Kit with Power Solution



DataComm Electronics, Inc.
6349 Peachtree Street
Norcross, GA 30071-1725
888.223.7977
770.662.8205
www.datacommcableorganizer.com

Parts Included:

1. Recessed Cable Plate with Power
2. Recessed Cable Plate with Straight Blade Inlet
3. 6 Ft. Extension Cord
4. Two (2) Old Work Electrical Boxes
5. 8 Ft. of Non-Metallic Electrical Wire
6. Three (3) Wire Nuts

Tools Needed

1. Drywall saw
2. 6 Ft. tape measure
3. Pencil
4. Screwdriver

Use the Flat Panel TV Cable Organizer Kit with Power Solution to install power and low voltage cables behind your flat panel TV (see Figures 1 & 2), amplifier or other audio and video devices to your equipment room or at the location of your head end equipment.

IMPORTANT INSTRUCTIONS:

- Use the local electrical code approved installation when installing this product.
- The electrical parts in this kit are designed to be used only as a kit and none of these electrical parts are designed to be used individually.
- This product is not designed to be part of your home or a commercial building's electrical wiring system.
- This installation is only energized (electrically active) when the supplied 6 ft. cord is plugged into the recessed straight blade inlet located on the recessed low voltage cable plate and the straight blade end of the 6 ft. cord is plugged into either your surge protector or wall receptacle.
- If you are not familiar with home wiring systems, please call a qualified electrician to install this product.

CAUTION: - Risk of Fire - Do not install Power Supply Cord within the Wall Cavity.




CAUTION: - Risk of Fire and Shock. No not connect this box to any other circuits or outlets.

Installation Instructions for New Construction:

Simply use a new nail on box and follow all other instructions described in the retrofit portion of the instruction sheet.

Installation Instructions for Retrofit Only:

1. Select the location of your flat panel TV mounting bracket. Now select the location for both the Recessed Cable Plate with Power and the Recessed Cable Plate with Straight Blade Inlet.
2. Both the Recessed Cable Plate with Power and the Recessed Cable Plate with Straight Blade Inlet are designed to be mounted between two studs (see Figure 1). Using the template supplied (see page 2), trace the openings needed for both recessed cable plates. Using a drywall knife cut a hole in the drywall the size of the template. Remember, these plates are designed to be mounted between two studs.
3. Remember that the Flat Panel TV Cable Organizer Kit with Power Solution is not part of your home's electrical wiring system. Before installing the single gang retrofit workboxes (see Figure 2), pull a piece of 12/2 or 14/2 with ground UL approved building wire from one opening to the other opening to connect the Recessed Cable Plate with Power to the Recessed Cable Plate with Straight Blade Inlet. Make sure the piece of wire is long enough to allow for easy installation of the receptacles. Insert a single gang retrofit workbox (see Figure 2). Securely fasten the workbox to the wall.

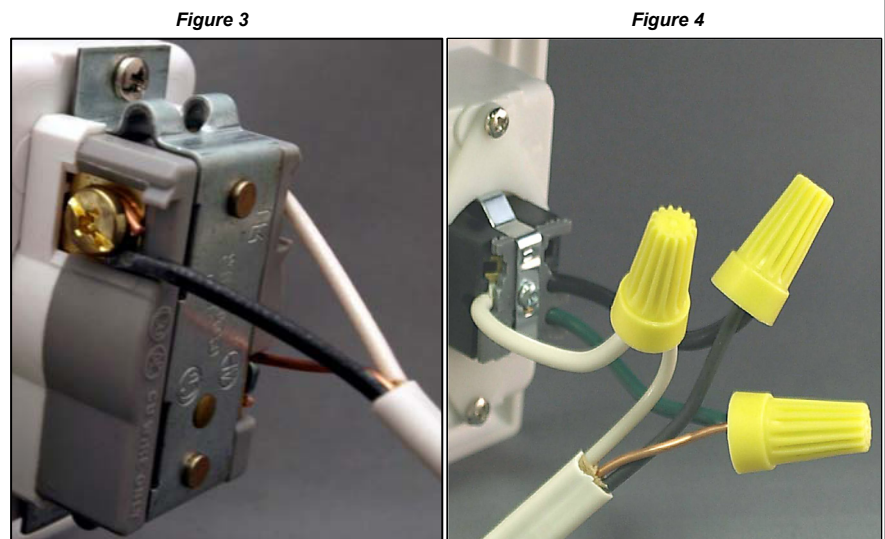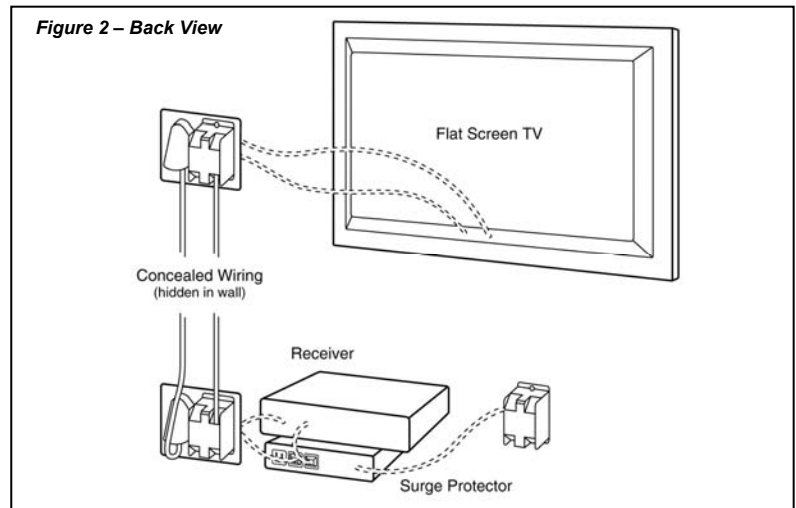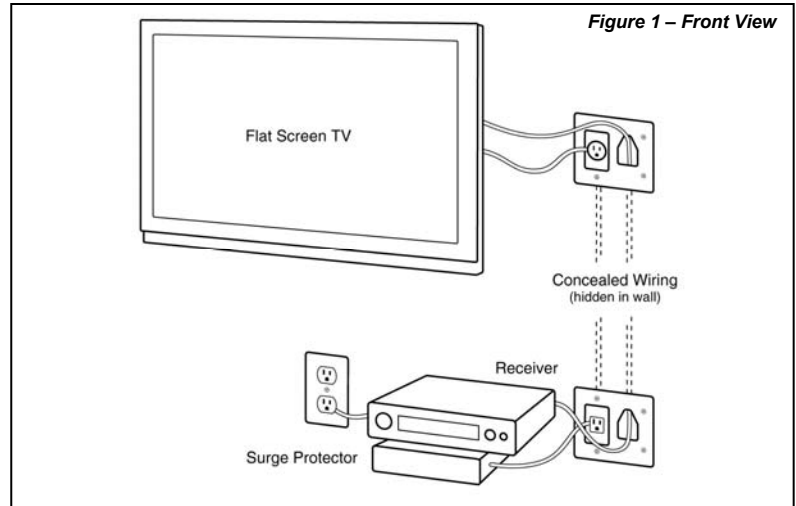

Installation Instructions 50-3323-WH-KIT (continued):

4. Now connect the receptacle on the Recessed Cable Plate with Recessed Power to the piece of 12/2 or 14/2 with ground UL approved building wire that you pulled from one opening in the drywall to the second opening in the drywall, strip off approximately 3 inches of the outer jacket of the UL approved building wire. Be careful not to cut the jacket of the inner wires. Connect the hot line (black) wire to the brass colored terminal screw and neutral (white) wire to the silver colored terminal screw. Be sure to connect the grounding (green) or bare grounding wire to the green colored terminal screw (**see Figure 3**).
5. Once you have wired the Recessed Cable Plate with Power receptacle, begin by inserting the receptacle portion of the plate into the retrofit work box. Once the entire recessed plate is flush to the wall, using the two white screws supplied, screw the receptacle portion of the plate to the work box. Next, screw down the screws with wings. The wings will fasten tightly against the back of the drywall. Plug all necessary video and audio cables through the opening on the Recessed Cable Plate with Power and inside the wall to the opening you cut out for the Recessed Cable Plate with Straight Blade Inlet.
6. To connect the Recessed Cable Plate with Straight Blade Inlet to the piece of 12/2 or 14/2 with ground UL approved building wire, use the supplied three wire nuts. Connect the hot line (black) wire to black wire, neutral (white) wire to white wire and grounding (green) wire to the (green) or bare grounding wire (**see Figure 4**). Make sure the three wire nuts are fastened tightly. Plug all necessary video and audio cables through the opening on the Recessed Cable Plate with Straight Blade Inlet. Insert the straight blade inlet portion of the plate into the retrofit work box. Once the entire recessed plate is flush to the wall, using the two white screws supplied, screw the straight blade inlet portion of the plate to the work box. Next, screw down the screws with wings. The wings will fasten tightly against the back of the drywall. Make sure to keep your UL approved building wire away from the video and audio cables (**see Figure 2**).

7. Install your flat panel TV mounting bracket per the flat panel TV bracket manufacturer's instructions. Make sure to read all instructions.
8. Now plug your flat panel TV or TV/Projector into the Recessed Cable Plate with Recessed Power (**see Figure 1**). Then plug the female end of the supplied 6 ft. cord into the Recessed Cable Plate with Recessed Straight Blade Inlet (**see Figure 2**) and male end into either your surge protector or wall receptacle.
9. For shock protection, both the UR, UL recognized receptacle and inlet components must be properly grounded.
10. Caution – use copper wire only with this receptacle and inlet.

WARNING:

- DataComm Electronics' products shall be installed and used only as indicated in DataComm Electronics' product instruction sheets.
- Instruction sheets are available online at www.datacommelectronics.com
- CAUTION: - Risk of Fire and Shock - Only intended for use on 15 ampere branch circuits.


CAUTION

- For shock protection, this device must be properly grounded.
- Use copper wire only with this device.

IMPORTANT INSTRUCTIONS

- Read and understand all instructions.
- Follow all warning and instructions marked on the product.
- Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- SAVE THESE INSTRUCTIONS.

ONLY LICENSED PROFESSIONALS SHOULD INSTALL THIS PRODUCT

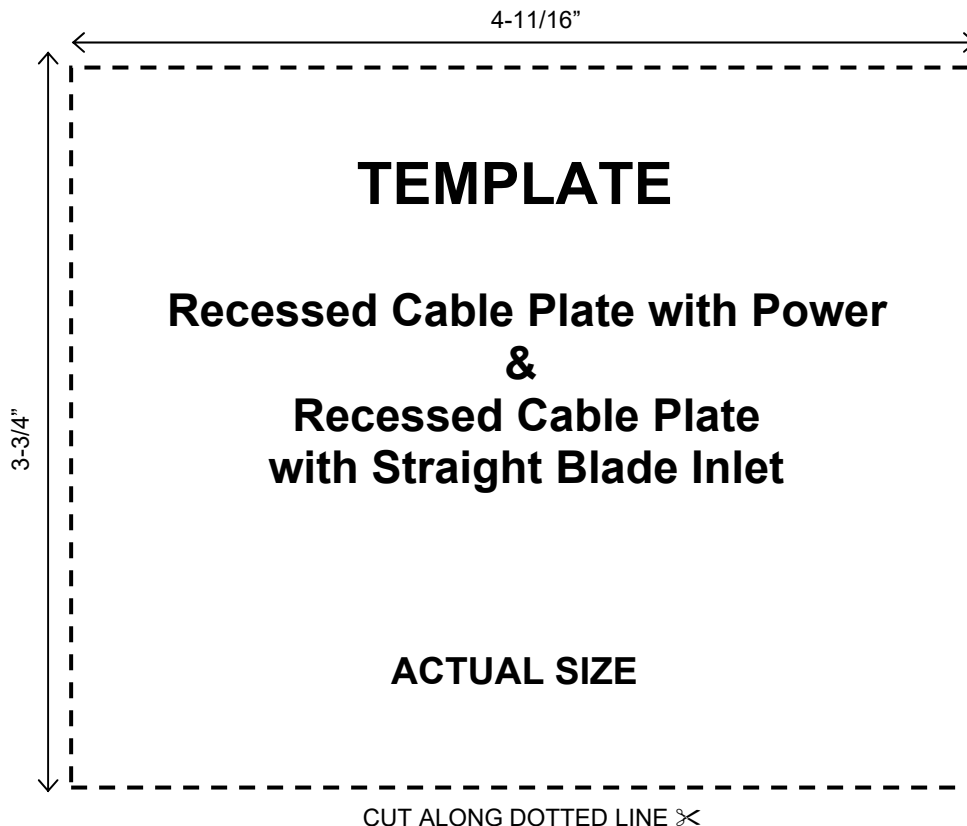

This product is patent protected by U.S. Patent numbers D553475, D554475 and 7390964

Multiple patents pending

RoHS Compliant

