DataComm Electronics, Inc. 6349 Peachtree Street Norcross, GA 30071-1725 888.223.7977 770.662.8205 www.datacommelectronics.com



# **Instruction / Installation Sheet**


### **DataComm Electronics Home Command Center II 70-0050**

## **Step 1 Installation of Back Panel**

- Place plate with telephone 110 IDC on wall location and trace openings for cut outs on wall. Remove plate and make cut outs for cables. Pull telephone and television cables through cut outs in the wall.
- Pull cables through back of plate 70-0050 module plate and secure plate to wall using mounting holes provided on the plate.

### Step 2 Telephone

- Install the wire from the telephone demarcation point to the 110 IDC marked from Telco.
- Install the twisted pair cables from each location in the house to the remaining 110 IDC connectors. Match the color-coding of the wires to the colors on the 110 IDC connectors. Incoming phone service can be tested using the test port.
- All cables should be punched down, using an industry standard punchdown tool, to the 110 IDC connectors following the T568A wiring configuration as shown below.
- Line 1 is Blue, Line 2 is Orange, Line 3 is Green and Line 4 is Brown.

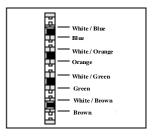

#### Step 3 Video

- Attach a male F-connector onto the cable TV service or satellite service incoming cable. Screw the incoming cable with F-connector to the connector marked input.
- Using F-connectors, terminate all coaxial leads that have been pulled through the cut outs in the wall to the remaining connectors on the splitter.
- Secure the cover of the 70-0050 module to the back panel and tighten screws located at the bottom of the back plate of the module.

#### INSTRUCTIONS ARE CONTINUED ON THE BACK SIDE OF THIS PAGE

# **Instruction / Installation Sheet**

### **DataComm Electronics Home Command Center II 70-0050**

### **CAUTION**

- Never install telephone wiring during lighting storms.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch un-insulated wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

### **IMPORTANT INSTRUCTIONS**

- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- SAVE THESE INSTRUCTIONS.

## ONLY LICENSED PROFESSIONALS SHOULD INSTALL THIS PRODUCT



ETL LISTED
CONFORMS TO
UL STD 1863
ANSI/UL STD 60950-1
CERTIFIED TO
CAN/CSA STD C22.2 NO 60950-1