




Scan QR code for all enclosure sizes and cover options




DataComm Electronics, Inc.
 6349 Peachtree Street
 Norcross, GA 30071 USA
 888.533.2688
 770.448.0540
 www.datacommelectronics.com


Parts Included

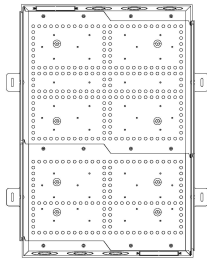

21-in Enclosure Box(1)

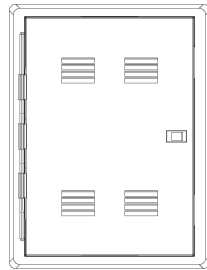

21-in Extended Cover(1)



21-in Cardboard Dust Guard(1)



Screws (8)

Tools Needed



Drill




Pen/
Pencil



Level


STEP 1

Place 21-in Enclosure Box in the install location.

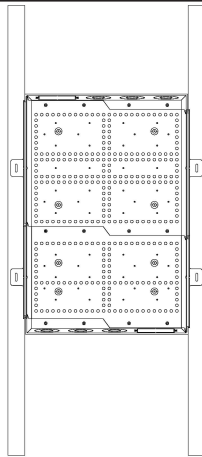


STEP 2

Make sure the enclosure box is level and mark the four screw locations on the studs using a pen or pencil.

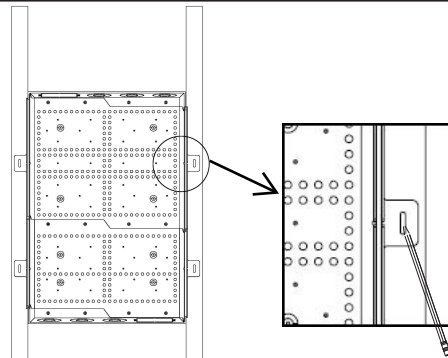


STEP 3

Secure the four tabs to the studs using the included screws and a drill.

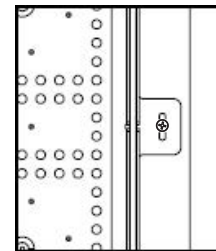


STEP 4 (after running wires)

Install 21-in Cardboard Dust Guard by slipping the cardboard edges straight back into the enclosure.

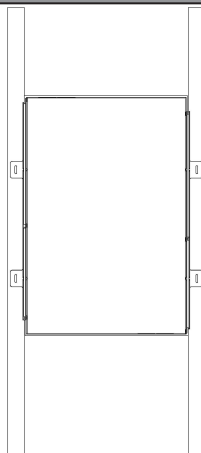

STEP 5 (after drywall)

Remove the cardboard dust guard. Complete installation by securing 21-in Extended Cover to the enclosure using the included screws and a drill.

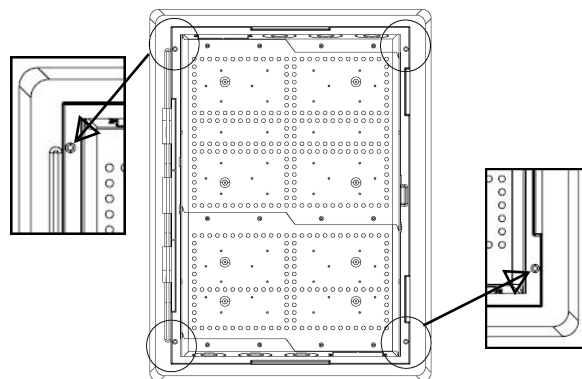

STEP 6

Close and latch the cover.

